




# INSTALLATION GUIDE

This installation guide is applicable for ICE BLADE PRO v2.0 Series.

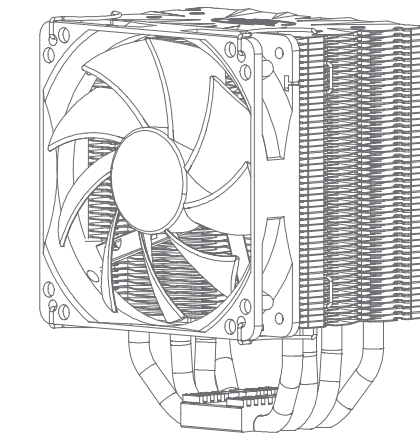


ICE BLADE PRO v2.0


PRODUCT SCHEMATIC DRAWING

1 Nut	4 pcs	2 Insulation Pillar	4 pcs	3 Screw Bolt	4 pcs	4 Mounting Bracket(Intel)	2 pcs	5 De-Vibration Buckle	4 pcs
6 Retention Plate	1 pc	7 Back Plate	1 pc	8 Mounting Bracket(AMD)	2 pcs	9 Insulating Washer (For LGA775 only)	1 pc	10 Double-screw Bolt	4 pcs
11 Wire Clip	4 pcs	12 Thermal Grease	1 pc	13 De-vibration Buffer	8 pcs	14 Fan	1 pc	15 Heatsink set	1 pc


## INTEL LGA1366 LGA1155 LGA1156 LGA775 Installation

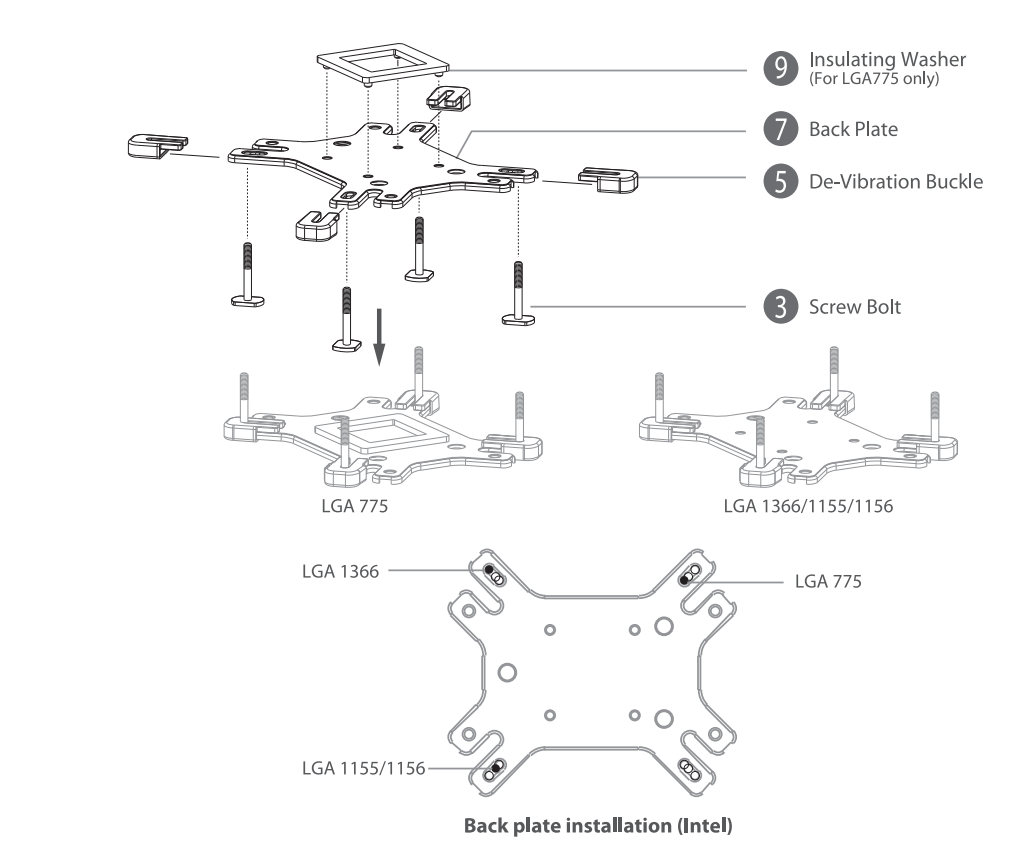

1. Assemble corresponding parts to the back plate according to the illustration above.

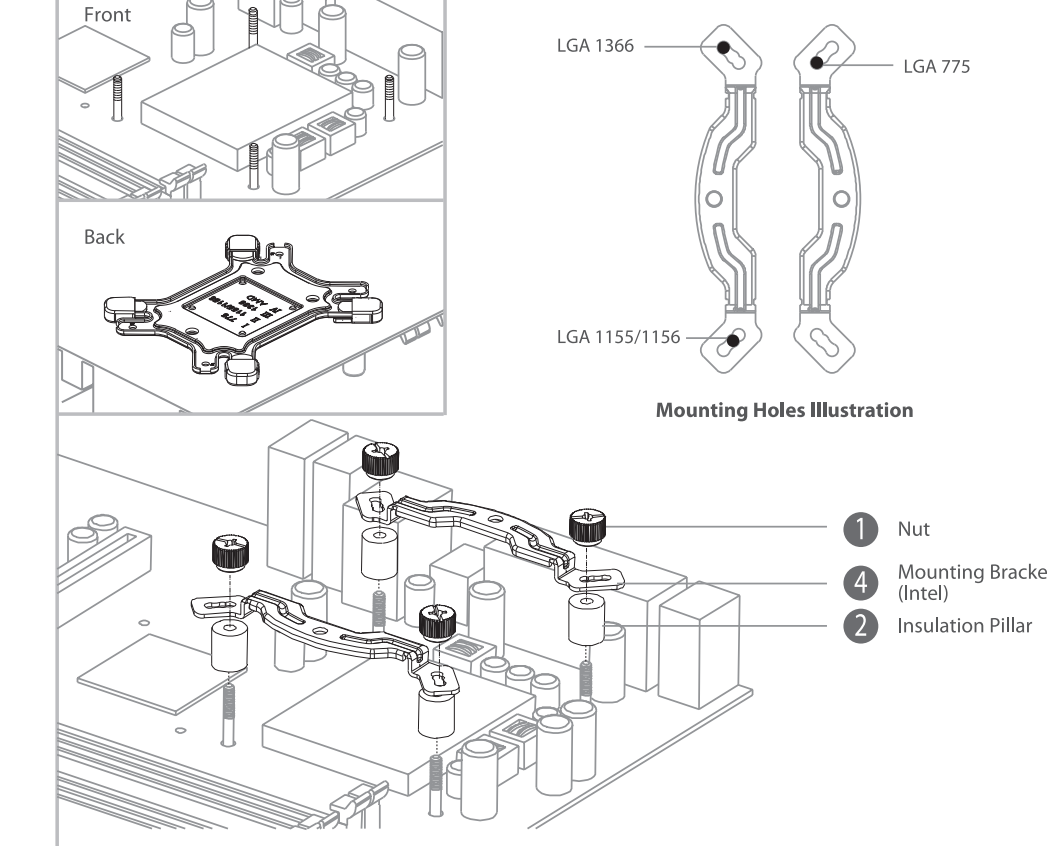

2. Attach the mounting bracket(intel) to the motherboard.

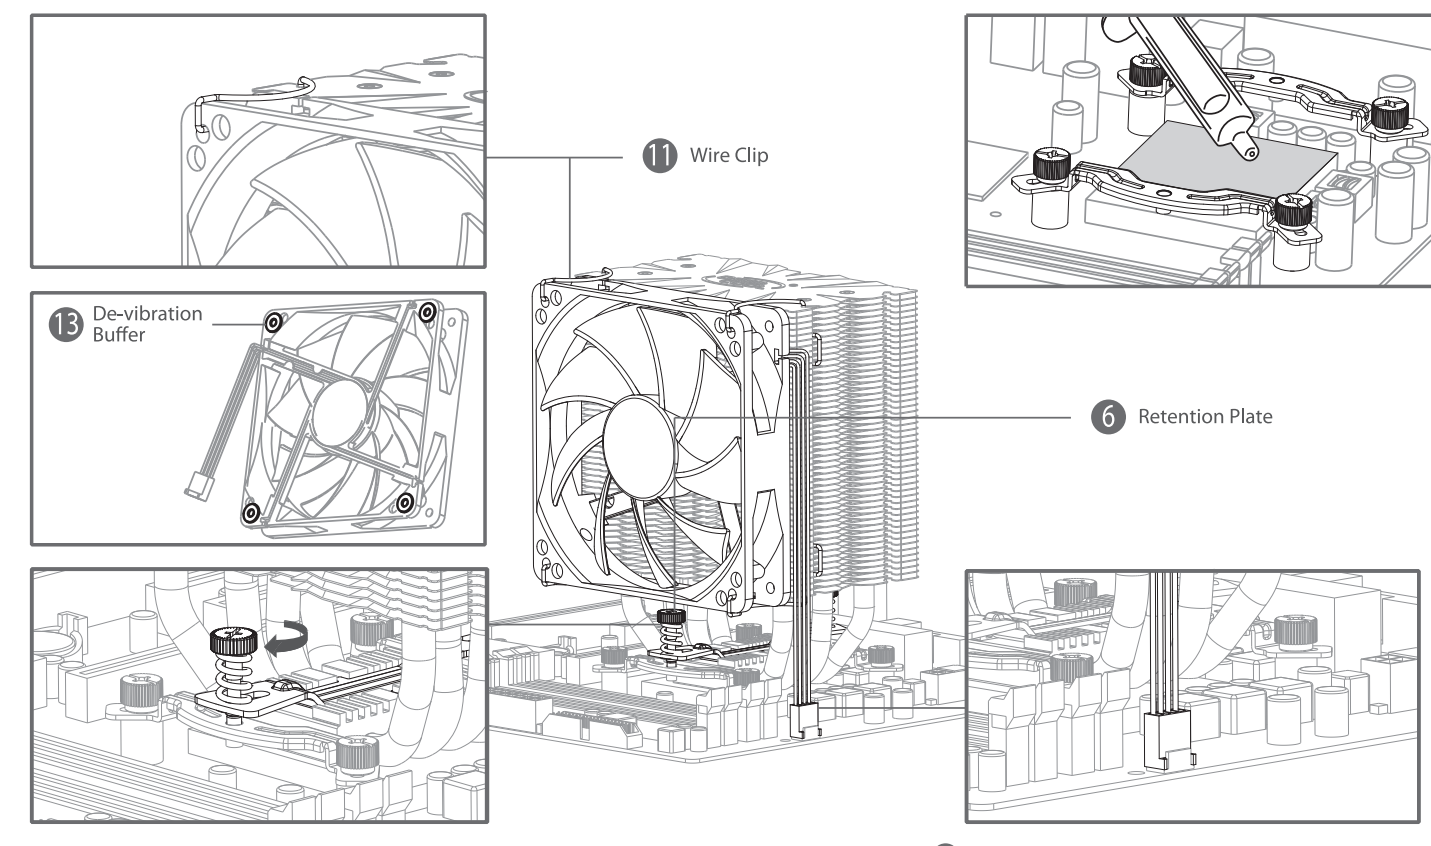

3. Evenly apply a thin layer of thermal grease onto the processor. Secure the heatsink by attaching 6 retention plate to the mounting brackets. Peel off the films of 13 de-vibration buffers and stick them on the four corners of the fan as illustrated, and attach the fan to the heatsink with 11 wire clips. Finish the installation by connecting the fan cable to the motherboard.



## AMD FM1 AM3+ AM3 AM2+ AM2 Installation

1. Assemble corresponding parts to the back plate according to the illustration above.

2. Attach the mounting bracket(AMD) to the motherboard.

3. Evenly apply a thin layer of thermal grease onto the processor. Secure the heatsink by attaching 6 retention plate to the mounting brackets. Peel off the films of 13 de-vibration buffers and stick them on the four corners of the fan as illustrated, and attach the fan to the heatsink with 11 wire clips. Finish the installation by connecting the fan cable to the motherboard.



## INTEL LGA2011 Installation

1. Attach the mounting bracket(intel) to the motherboard.

2. Apply a thin layer of thermal grease onto the processor.

3. Secure the heatsink by attaching 6 retention plate to the mounting brackets. Peel off the films of 13 de-vibration buffers and stick them on the four corners of the fan as illustrated, and attach the fan to the heatsink with 11 wire clips. Finish the installation by connecting the fan cable to the motherboard.

MADE IN CHINA  
Beijing Deepcool Industries Co., Ltd.  
All rights reserved.  
Devices not included.  
Brands and designs are trademarks from Beijing Deepcool Industries Co., Ltd.  
Patent pending, NO.: 201230103528.7